


**Fixing Pack Contents:**


|                    |
|--------------------|
| 100mm Screws (x16) |
| 70mm Screws (x20)  |

# BRAUNSTON ARBOUR - Assembly Instructions


**Required Tools:**




Tape Measure




Screwdriver




Drill

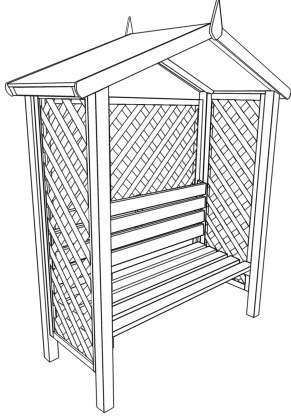


**Parts:**

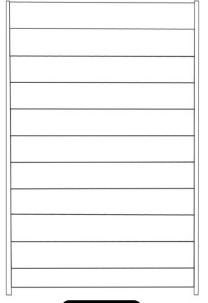


**E (x2)**

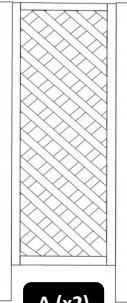


**A (x2)**

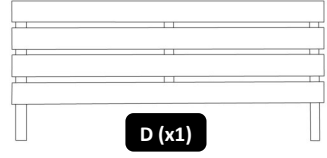


**D (x1)**

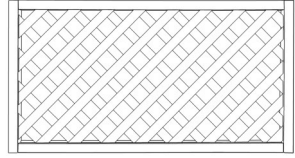

**B (x1)**



**C (x1)**



**F (x2)**

**Step 1.** ➔

70mm Screws (x4)

**Step 2.** ⬅

70mm Screws (x2)

**Step 3.** ➔

70mm Screws (x10)

362mm

**Step 4.**

100mm Screws (X8)

Step 5. 

100mm Screws (x8)



Step 6.

70mm Screws (x4)

